

80mm

**POE AI Camera**  
—User Manual—



Security Expert for Your Home and Business


Table of Content

1. Meet the POE AI Camera
2. View on Smart Phone
3. View on Web Browser
4. View on PC Software
5. View on Third Party Video Software

**POE AI Camera**

Thank you for purchasing our security POE AI Camera. We are committed to providing customers with high quality and reliable security products and solutions. The POE AI Camera is a high-end security camera with a wide range of features and functions. You can find more information about the POE AI Camera on our website.

**About the POE AI Camera**

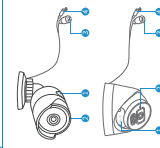


3. Specify for view, when using the alarm sound on the camera. We provide you with different modes, the position of the alarm sound is different.


4. DC (Down): The alarm sound is in the center of the camera.
5. DC (Down): The alarm sound is in the center of the camera.

This POE AI Camera is an AI camera, it can work with other POE AI cameras to form a network. When you use the camera, you can see the camera's status on the camera's web page. When you use the camera, you can see the camera's status on the camera's web page.

4. Connect the camera to the power supply. There are two methods to connect the camera to the power supply: connect to the camera directly and connect to the camera through a power adapter.



1.2 Connect the POE Switch to the POE SW.

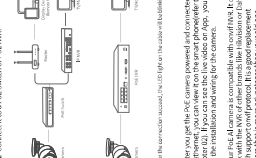

After you get the POE camera powered and connected to the power supply, you can see the camera's status on the camera's web page. When you use the camera, you can see the camera's status on the camera's web page.

**VIEW ON SMART PHONES**

1. View on Smart Phones

1. Download and install the Meye Pro App




2. Create an account

2. If you do not have an account for Meye Pro App, please click the "Sign Up" button to create an account. After you create an account, you can log in to the app.

3. Add Device

3.3 Click the QR code in the article of camera add device to scan the camera. After you scan the QR code, the camera will be added to the app.


3.3 Press waiting for the app opening for the device in the correct link.



3.5 New player chooses the camera IP address when you add the camera. The camera password default is null, please click the "Add" button to set the camera password. After you set the camera password, the camera will be added to the app.

**Control the App**


Click video image of the camera and then you can play the video image of the camera. You can also click the "Play" button to play the video image of the camera. You can also click the "Stop" button to stop the video image of the camera. You can also click the "Refresh" button to refresh the video image of the camera.

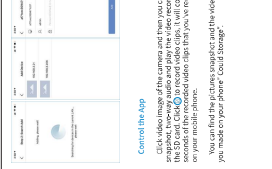

**View on Edge**

3.1 Open your Edge browser, click "Add" and choose the IP address of your camera. After you click "Add", you can see the camera's status on the camera's web page.


3.2 Choose your camera (POE AI Camera) and click "Add".



**4. Unique features**


**Alarm Voice Alert**

The camera has a built-in speaker and microphone. When you receive an alarm, the camera will play the alarm sound. You can also click the "Voice Alert" button to play the alarm sound. You can also click the "Voice Alert" button to stop the alarm sound.

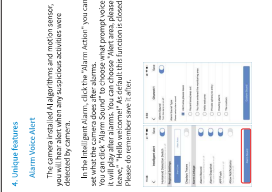


**Custom and Alert Area**

The alert area and alert range can be multiple sets. Alarm will be triggered only when both of human heat and motion are detected. You can set the alert area and alert range on the camera's web page. You can also click the "Alert Area" button to set the alert area and alert range.

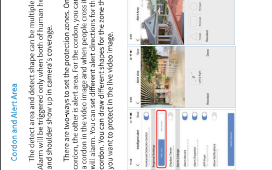

**View on Web Browser**


You can also view the camera on web browser. Please refer to the user manual for more information. You can also click the "View on Web Browser" button to view the camera on web browser.

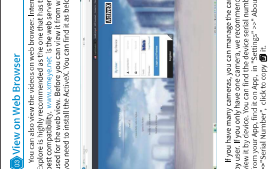

**View on PC Software**


Step 1: Download PC software from the website. You can also click the "Download PC Software" button to download the PC software.

Step 2: Choose Device Manager (PC search), then find the camera and click "Add".

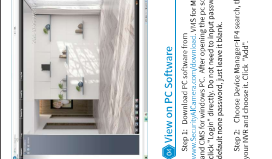


**View on Third Party Video Software**

This POE camera is compatible with various third party video software. You can also click the "View on Third Party Video Software" button to view the camera on third party video software.



**View on VLC**


After you get the POE camera powered and connected to the power supply, you can see the camera's status on the camera's web page. When you use the camera, you can see the camera's status on the camera's web page.

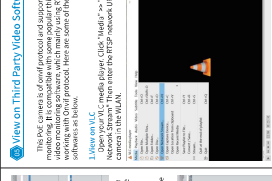

**View on Blue Iris**

2.1 Open your Blue Iris software, click menu as "Add new camera".


2.2 Click "Find/Import" and choose the IP or the IP address of your camera.

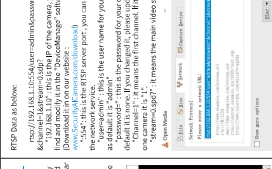

**View on Edge**

3.1 Open your Edge browser, click "Add" and choose the IP address of your camera. After you click "Add", you can see the camera's status on the camera's web page.


3.2 Choose your camera (POE AI Camera) and click "Add".

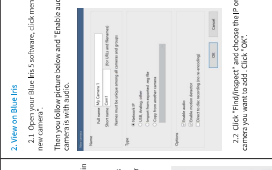

**View on Edge**

3.1 Open your Edge browser, click "Add" and choose the IP address of your camera. After you click "Add", you can see the camera's status on the camera's web page.


3.2 Choose your camera (POE AI Camera) and click "Add".

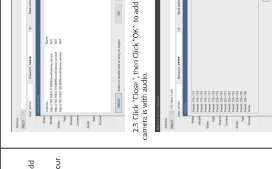

**View on Edge**

3.1 Open your Edge browser, click "Add" and choose the IP address of your camera. After you click "Add", you can see the camera's status on the camera's web page.

3.2 Choose your camera (POE AI Camera) and click "Add".

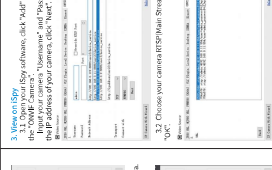

**View on Edge**

3.1 Open your Edge browser, click "Add" and choose the IP address of your camera. After you click "Add", you can see the camera's status on the camera's web page.

3.2 Choose your camera (POE AI Camera) and click "Add".

